




































DELER knivblader			
	Code	Navn	EAN
	1027229	CarbonMax faste blader, 5 stk	6411501701473
	1027230	CarbonMax faste blader, 10 stk	6411501701480
	1027231	CarbonMax faste blader, 50 stk	6411501701497
	1048066	CarbonMax snap-off blader 18 mm, 10 stk	6411501560391
	1048067	CarbonMax snap-off blader 25 mm, 10 stk	6411501560407
DELER trillebærer			
	1024527	Fiskars røraksel til 11/12/14/19 G	6411501661272
	1024530	Fiskars dekk 4.00X6 til trillebårhjul	6411501661302
	1024531	Fiskars slange 4.00X6 trillebårhjul	6411501661319
	1025349	Fiskars understell komplett 011G/166446	6411501661364
	1025430	Fiskars hjul og deler trillebår 12/14/19	6411501661388
	1024529	Fiskars hjul 4.00x6 4 lag til 011G/166446	6411501661296
	1024537	Fiskars hjul 4.00x6 4 lag til 12/14/19G	6411501661395
	1024549	Fiskars hjul 4.00X6, 4 lag til hagebår	6411501664556
	1024538	Fiskars hjul polyfylt 4.00X6	6411501661401
	1056209	Fiskars kompakt hjul Flexi Light for 11G/13G	6411501600301
DELER skaft			
	1024505	Classic spadeskraft rett 2030 Passer til 1014772, 1014773, 1014776, 1024472	6411501661012






	1024506	Classic anleggspadeskaft 2060 Passer til 1014775	6411501661029
	1024507	Classic skuffeskaft langt 2090 Til 1014771, 1024473, 1024491, 1024495, 1024497, 1024498, 1024499	6411501661036
	1024508	Classic skuffeskaft 2095 Til 1014771, 1024473, 1024491, 1024495, 1024497, 1024498, 1024499	6411501661043
	1024511	Classic greipskaft m/hylse 2350 Passer til 1003692, 1003693, 1005023	6411501661081
	1005035	Classic riveskaft m/hylse 2400 Passer 1003705, 1014778, 1014780, 1018603	6411501357465
	1024476	Classic plenrive-/kosteskaft 2405, Passer 1014812	6411501357472
	1024477	Classic riveskaft lang 2420 Passer 1014781, 1014812	6411501357489
	1024512	Classic krafseskaft lang 2440 Passer 1014793	6411501661104
	1024514	Classic krafseskaft 2455 Passer 1020747	6411501661128
	1024561	Sleggeskaft 32" Passer 1630 (3kg) t.o.m. 2015	7041354000615
	1024562	Sleggeskaft 36" Passer 1024558 + 1640, 1650, 1740 (4 + 5kg) t.o.m. 2015	7041354000646
	1024566	Hakkeskaft 36" Passer 5125, 5230, 7025, 7125 t.o.m. 2015	7041359000306
	1024517	Classic plasthåndtak 2505 Passer Classic redskap t.o.m. 2019	6411501661159

DELER hagesakser




	1026275	Kniv, fjær og skruer til PX92	6424002008491
	1026276	Kniv, fjær og skruer til PX93	6424002008507
	1026277	Kniv, fjær og skruer til PX94	6424002008514
	1026288	Kniv skruer til L74, L90, L92, LX92	6424002008620
	1026285	Kniv, skruer til L78, LX94, LX98	6424002008590
	1026292	Kniv, motskjær, skruer til L77	6424002008668

	1027526	Snor til Multikutter UP86	6411501150356
	1027525	Snor til Multikutter UP82	6411501150349
	1026295	Hode til Multikutter UPX86, UPX82	6424002008699
	1026293	Knivsett til Multikutter UPX86, UPX82 UP86, UP82	6424002008675
	1026296	Håndtak + snor til Multikutter UPX86	6424002008705
	1026297	Håndtak + snor til Multikutter UPX82	6424002008712



DELER PRO beskæringssag

	1020193	PRO sag reserveblad CC33	6411501233363
	1020195	PRO sag reserveblad SC33	6411501233370
	1020197	PRO sag reserveblad SF33	6411501233387
	1020201	PRO slire for sag SW-240/330	6411501233318
	1020202	PRO håndtak til sag SW-240/330	6411501233325

DELER diverse

	1024519	Classic plenrivehode M	6411501661180
	1011621	Fjærsett til Lufto 9071	7317797090712
	1005043	Classic blad for tynningshakke 1003704	6411501367860

DELER vanning

	1024091	Fiskars o-ringer for spredere 4stk	6411501510471
	1024092	Fiskars filter for spredere 2stk	6411501510488

	1024093	Fiskars o-ringer for hurtigkoblinger 4stk	6411501510495
DELER snøredskap			
	1024554	Fiskars hjulsett til mover 143057	6411501664600
	1024524	Armsett til snørydder 9088/1023722	6411501661241
	1024525	Stålbølge til snørydder 9088/1023722	6411501661258
	1025799	Aluminiumskinne til Mover 1024501	7041354001414